

# MIRRORIMAGE WIBBOBIMAGE<sup>®</sup>

## INSTALLATION INSTRUCTIONS

### **WARNING**

- Keep children away from mirror pieces, caulking gun, and silicone. If silicone is consumed it can be harmful to your health.
- Handle with care some pieces may be sharp.
- Read & follow assembly Instructions.




- If a part is missing or damaged call the store where you purchased it immediately.

### **TIPS**


- Do not leave tape on longer than 2 to 3 hours. Some pieces may require 3/8 to 1/2 inch of silicone in the center to level mirror evenly.

#### STEP 1 CLEAN SURFACE

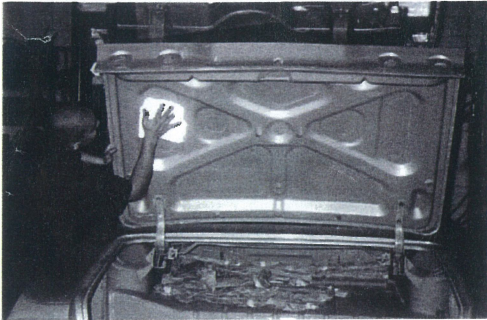


Wipe surface with a soft towel, then spray surface with Windex and wipe clean.

#### STEP 3 PUT MIRROR IN PLACE

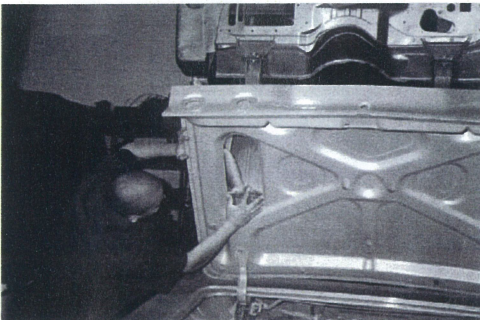


Attach mirror and hold firm in place for approximately 7 to 10 minutes.

#### STEP 5 REMOVE MASKING TAPE

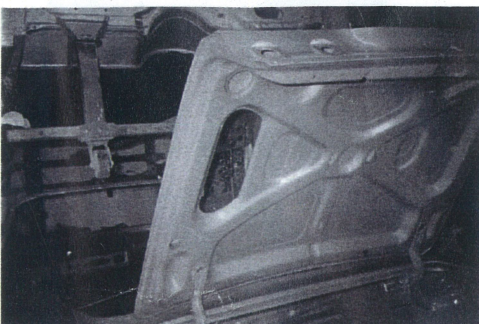

Remove tape gently to avoid peeling the paint. Remove film from mirror and your finished.

#### STEP 2 APPLY SILICONE

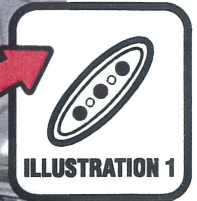

Remove film and apply silicone in center and on each end. You can also make a trace around edges for stronger support see illustration 1. Apply at least 1/2 inch from edges to avoid spillage from sides. On pieces that have no solid center to attach to carefully put silicone around edges. Apply rolls of masking tape between silicone to help silicone seal faster.

#### STEP 4 APPLY MASKING TAPE



Apply masking tape so that it hits each corner and all sides. Apply masking tape firm so that it holds the mirror down in place. Hold with your hand for approximately 7 to 10 minutes to secure mirror in place. Leave tape on for 2 to 3 hours only. Leaving it on longer may cause paint to peel. Avoid using excess tape on paint to avoid paint peeling.

### **NEED ASSISTANCE**

**CALL (562) 483-1445  
OR VISIT OUR WEB SITE  
[www.mdctinc.com](http://www.mdctinc.com)**